



FG-73R5 リングマフラー取付説明書

Ring muffler Setting instruction

Ver 2022, Jan

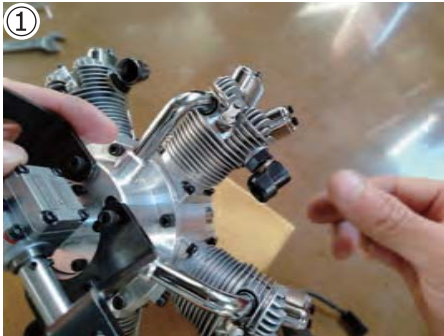


①アダプターのナットを全て緩めておきます。
①Loose adopter nuts for all cylinders.

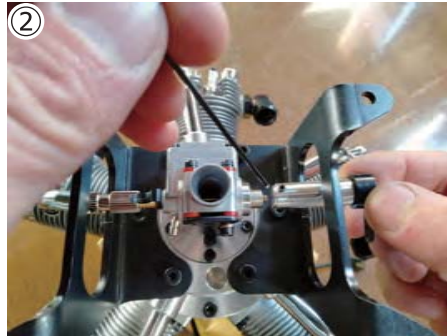

②スロットル延長アダプター、右側のマウントを外します。
②Remove the throttle extension adapter and right mount.



③リングマフラーナットを全てのアダプターに均等に軽くねじ込みます。ネジ部に潤滑油を少し付け、指で2～3山回るように位置を合わせて下さい。マフラーの各枝管とアダプターが出来るだけ同軸になる様に調整します。
③Insert all the nuts of the ring muffler into each adapter. Apply lubricant oil to each thread and adjust position that all threads can be turned by your fingers for 2~3 turns. Keep in mind that the axes of the branch pipes and adapters should be aligned.

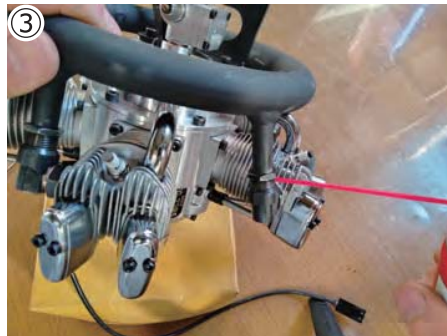

④スパナでリングマフラーのナットを締めこみます。5つを均等に対角線の順に徐々に締めこんで下さい。次に、同じくシリンダー側のアダプターナットをスパナで締め付けます。
④Equally and gradually tighten up each nut of the ring muffler by spanner in a diagonal sequence. After that tighten adapter nuts for all cylinders in a diagonal sequence as well by spanner.



⑤外した時と逆の手順で、右側マウントとスロットル延長アダプタを装着して、完了です。
⑤In the reverse sequence from ②, attach the right mount and throttle extension adapter. Now installation is completed.



※ナットが斜めの状態で無理に締めこむと、ネジが破損しマフラーそのものが使用不能になります。もし位置が合わない場合は、各アダプターを入れ替えてみて下さい。※Never tighten by force, or you may break thread and entire muffler. If you can't fit the position well, try replacing adapters each other.